



Cisco SX80 Module Setup Guide

About:

The Cisco TelePresence SX80 Codec provides a powerful and flexible platform for creating the ultimate video collaboration experience. The SX80 was built with the integrator in mind to support flexibility and creativity for customized video collaboration rooms that delight customers. Partnered with Compass Control® Pro users gain the ultimate control experience.

Setup Communication:

The Cisco SX80 is controlled over RS-232. Under the Cisco web interface, make sure serial communication is enabled and also disable password authentication through RS-232 communication.

Setup in Compass Navigator:

In Zone Construction, please drag and drop the Cisco-SX80 into the tree. Under controlling flow, drag the Cisco SX80 into the desired MC I/O port. If using an MC-1000 and placed on one of the six I/O ports, the remaining five ports will be unable to have RS-232 functionality. Only one Ipad may be used with a given Cisco-SX80 controlled over RS-232.

Setup Complete:

Upload and update project for use.

Compass Control® Pro Offers:

- Bi-directional Feedback
 - End Point Audio Level, Mute
 - Microphone Mute
 - Presentation
 - Call Dialing, Answer & Reject
 - Standby Mode
 - DND Mode
 - Meetings
 - Contacts