



Discover The Possibilities™



IC Realtime Flex DVRs

Module Setup

About:

IC Realtime Flex series DVRs provides ptz control and streaming for all cameras.

Setup Communication:

Flex DVRs are equipped with network capabilities. These boxes are controlled over TCP/IP on port 554.

Setup in Compass Navigator:

One module is required per Flex DVR. After adding the module, please enter the IP address of the DVR and the login credentials under Properties. In Zone Construction, place the module as a video source. Once placed, head over to Controlling Flow and place the Flex module in the System Designer.

Setup Complete:

Upload and update project for use.

Control:

Compass Control offers

- DVR Controls
 - PTZ of all channels, up to 16.
 - Channel Streaming, up to 16
 - Zoom
 - Focus