



Surgex Axxess Elite Module Setup Guide

About:

The Axess Elite is a complete power management system that provides remote insight and control of the electrical power consumed by an underlying device. It enables the switching of devices in various power modes, each with different power usage characteristics related to device performance.

Add Module:

Please open Compass Navigator for setup.

In Compass Navigator, open the desired project to add the Surgex Axess Elite module. Please note that each Axess Elite Unit requires its own Axess Elite Module for control. Add as many modules as required.

Setup Communication:

Axess Elite units are controlled over TCP/IP Telnet on Port 23.

In Compass Navigator, please insert the IP Address under Device Properties. Please note that each Axess Elite unit requires its own module. Apply the IP Address to each module accordingly.

Setup Login:

In Compass Navigator, click on the Axess Elite device properties tab located under IP Devices. If the Interface is password protected, then enter the password under "Password" and the username under "Login". Click on "Login type" and set the value to "Common". These credentials are required for proper operation. For convenience, the module is set up to use the default username and password.

Setup Complete

The module setup is complete. Save the module and open the project back up. Upload and update the project for use.

Compass Control® Pro Offers:

- Outlet Control
 - On/Off

- Real-Time System monitoring
 - Line Voltage
 - Total Current
 - Power Draw